


# Optional Board for the OmniControl Board

QCC Optional - Access ID Socket  
Designed for Slide Gate Operators Only!

QCC Mode of Operation Switch

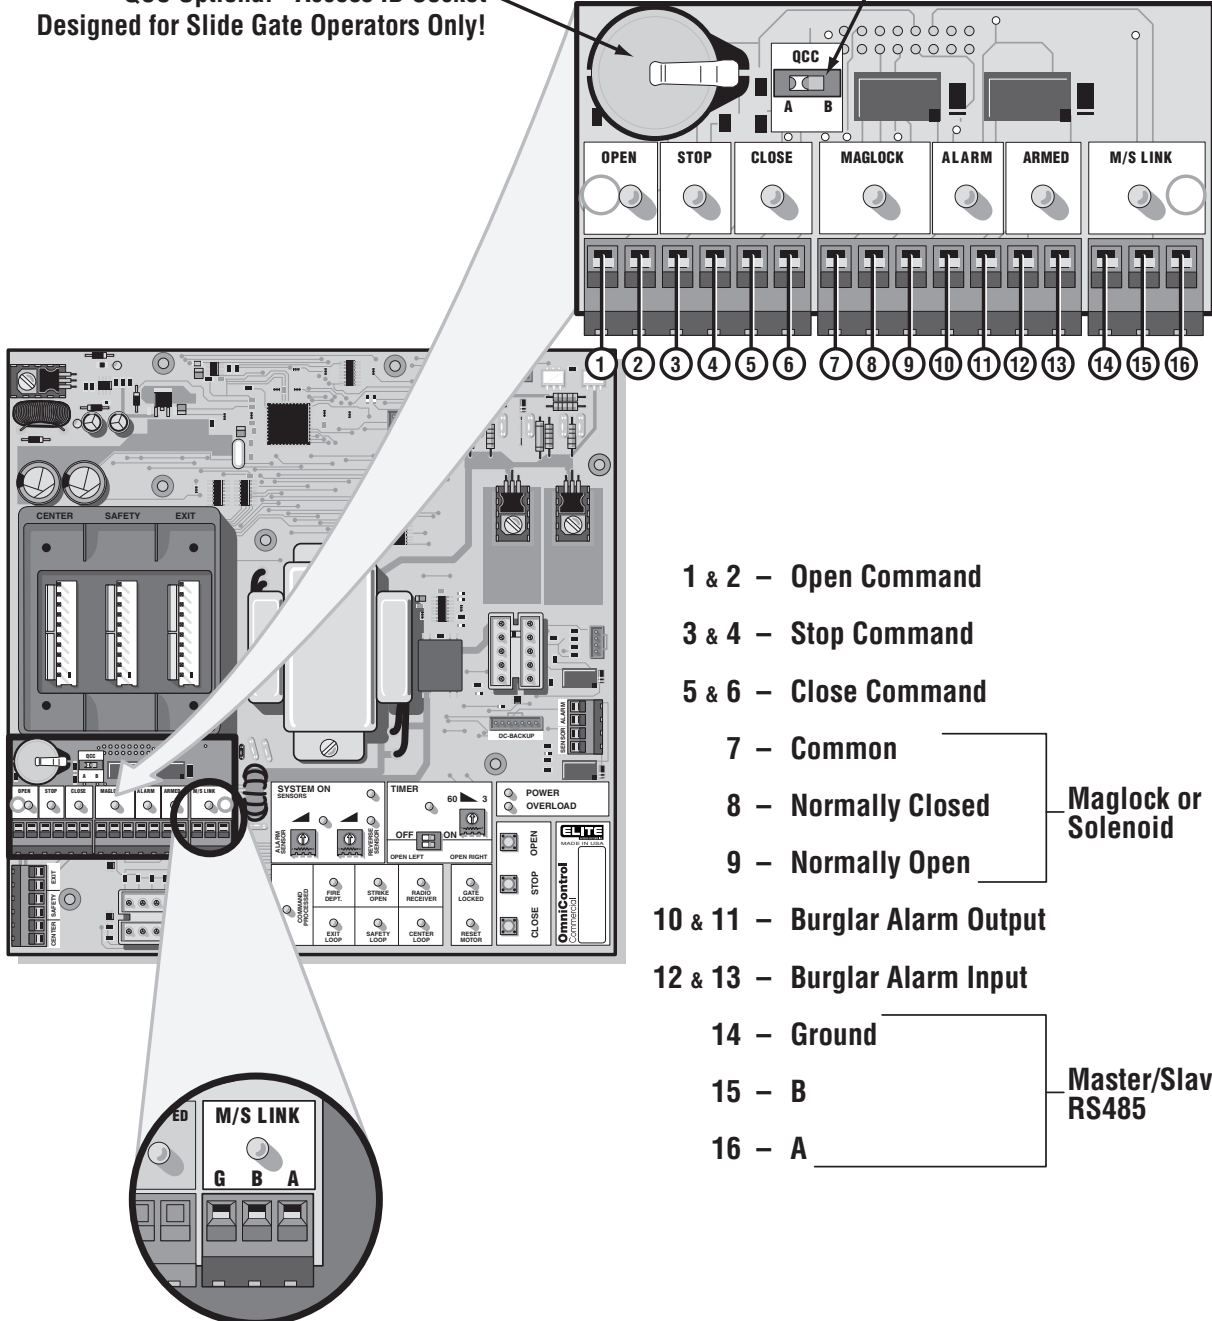

- 1 & 2 – Open Command
  - 3 & 4 – Stop Command
  - 5 & 6 – Close Command
  - 7 – Common
  - 8 – Normally Closed
  - 9 – Normally Open
  - 10 & 11 – Burglar Alarm Output
  - 12 & 13 – Burglar Alarm Input
  - 14 – Ground
  - 15 – B
  - 16 – A
- Maglock or Solenoid
- Master/Slave RS485

Use this socket when  
Master/Slave option is needed.

