

U.S. Automatic Wireless Keypad Programming: Adding a New Access Code



Enter Master Password Default 1 1 1 1 1

Press 9 - *1 long tone - start over at beginning
*2 beeps - continue...

Enter New Access Code _____

Press 9 - *no tone/sound

Re-Enter New Access Code _____

Press 1 - *1 long tone - start over at beginning
*2 beeps - continue...




While Looking at Receiver...

*Enter Access Code - Continue to
Hold Down the **LAST DIGIT** of the
Access Code and ...*



*(Using a Paperclip) Press the
P1 Button on the Receiver
Green Light Will Flash and Relay Will *CLICK**

(Use a Paper Clip)

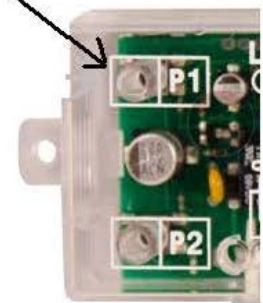

Initial programming requires a 5 digit pin, you can add 4 digit pin's only after keypad is paired to operator.

If programming a 4 digit pin, hit # or B after the pin number ex) 2468#